

TECHNICAL SPECIFICATIONS FOR MODEL EGW

**INDOOR RESIDENTIAL/COMMERCIAL GARAGE/WORKSHOP
ECONOMICAL SUSPENDED ELECTRIC UNIT HEATER**



Table of Contents

Unit Sizes	2
Features	2
Factory-Installed Options	2
Technical Data	2
Dimensions	2
Shipping Weight	3

In keeping with our policy of continuous product improvement, we reserve the right to alter, at any time, the design, construction, dimensions, weights, etc., of equipment information shown here.

TECHNICAL SPECIFICATIONS—CONTINUED

Unit Sizes

These heaters are available in three unit sizes based on heating capacity of 1,500–5,000 watts.

Features

- Voltage/phase option: 240/1
- Almond epoxy/polyester powder paint finish
- 20-gauge steel cabinet
- Adjustable louvers to control airflow
- High-temperature limit control with automatic reset (first level) and single-operation thermal fuse (second level)
- Helical coil nickel-chromium alloy wire heating element provides instant heat
- Unit-mounted thermostat
- Supplied brackets for wall- or ceiling-mounting that allow 360-degree rotation

Factory-Installed Options


Option	Description
AK3E	Voltage/phase 240/1 (may be connected to 208V supply with 25% reduction in heating capacity)
HK2	Almond cabinet color
IC11	Single-stage unit-mounted thermostat, 50–110°F

Technical Data

Parameter	Unit of Measure	Unit Size (kW)		
		2	3	5
Heating capacity	watt	2000	3000	5000
	BTUh	6824	10,236	17,061
Airflow	CFM	300		
Sound level	dBa	51		

Dimensions

Unit Size (kW)		
2	3	5
Width × Height (Inches (mm))		
12-1/16 × 12-3/8 (307 × 314)		

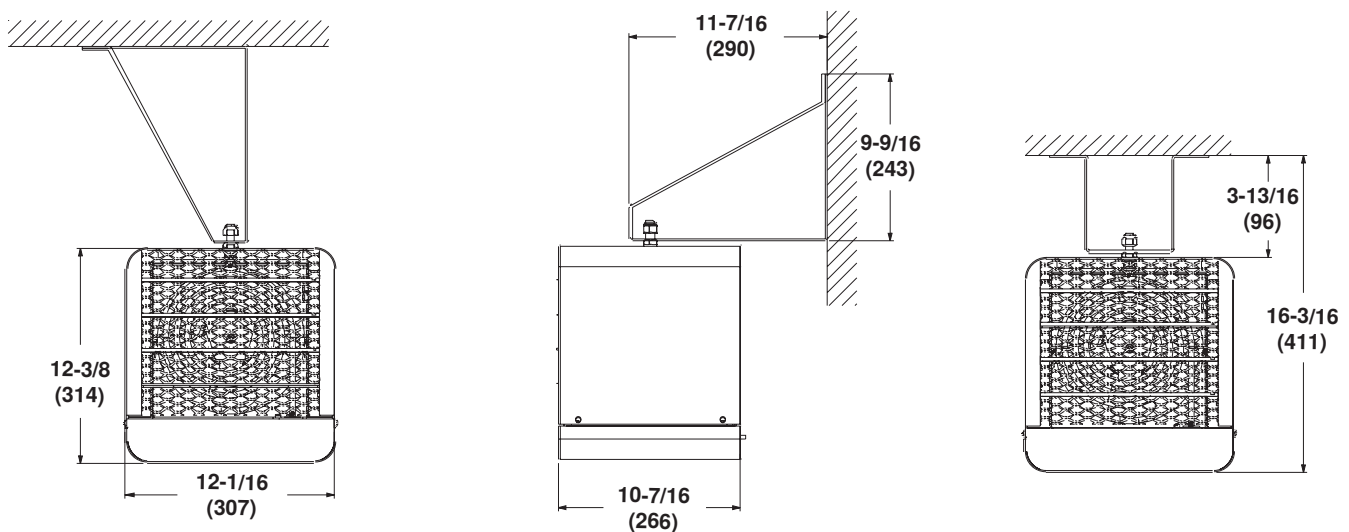

Shipping Weight

Unit Size (kW)		
2	3	5
Pounds (kg)		
20 (9.1)		

⚠ DANGER ⚠

- This heater has hot parts inside. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Do not operate any heater after it malfunctions. Disconnect power at the service panel and have the heater inspected by a reputable electrician before reusing.
- Do not use outdoors.
- Do not insert or allow foreign objects to enter any heater opening as this may cause electrical shock, fire, or damage to the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any way whatsoever.
- Use this heater only as recommended by the manufacturer. Any other use may cause electrical shock, fire, or damage to the heater.

For more information on Reznor HVAC products:

- **Contact your local Reznor representative at 1-800-695-1901**
- **Refer to the manuals and additional consumer materials found at www.reznorhvac.com**

