


Installation Instructions

STEP 1

Turn thermostat mode to OFF.


Turn fan to AUTO.

Remove door and discard old filter.

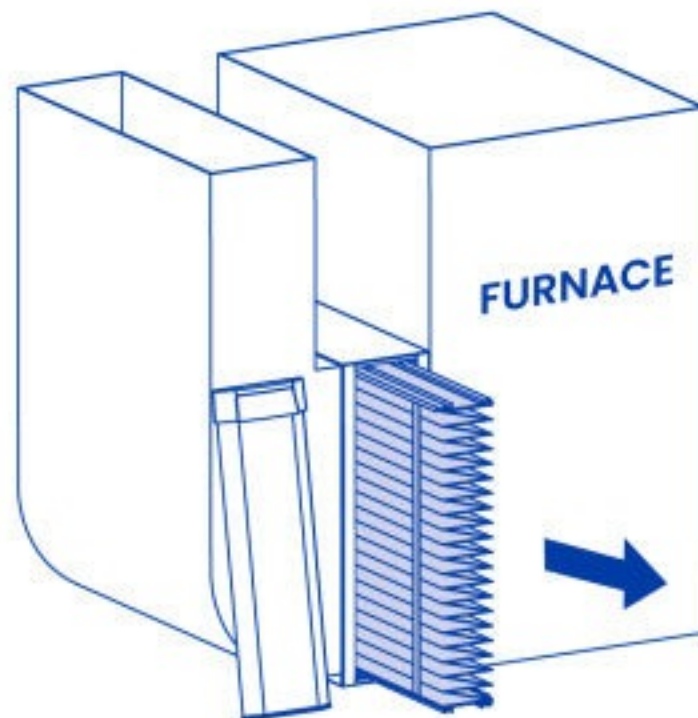

STEP 2


Point arrows toward furnace or air handler.

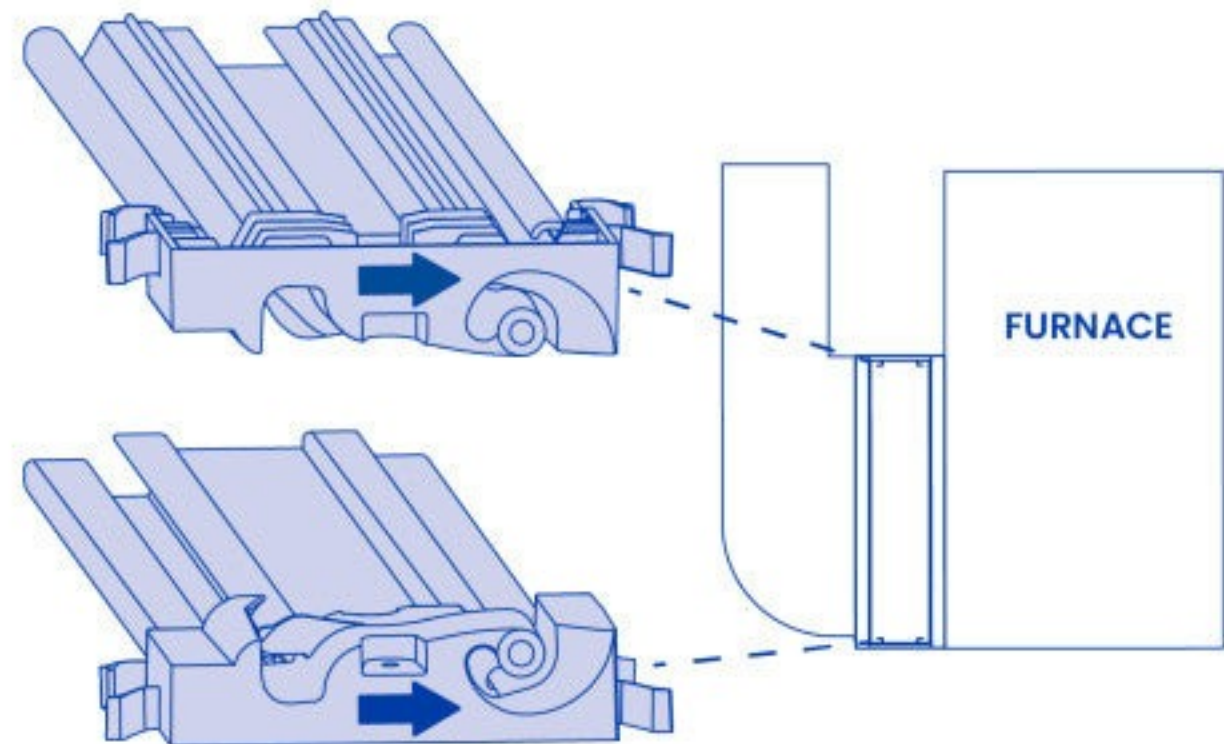

Optional

Secure each rail piece into air purifier with one screw.

*Recommended for Space-Gard 2120 & 2200.

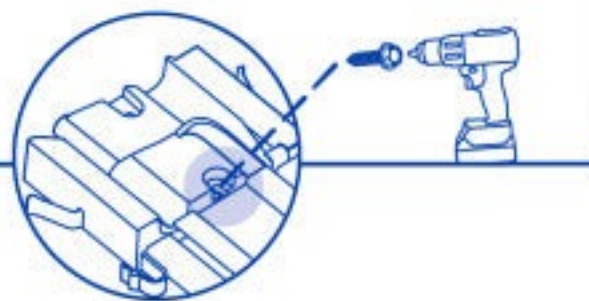


STEP 3


Carefully align and slide top rail along air cleaner tracks.

Slide in until you hear two clicks.

Repeat with bottom rail.

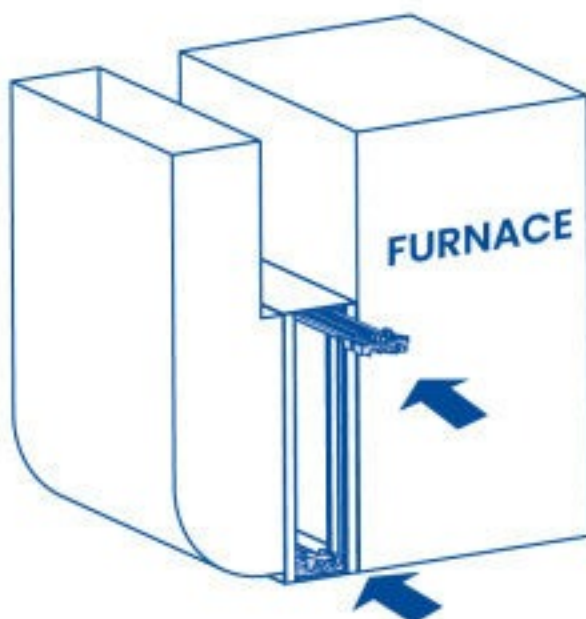

Top

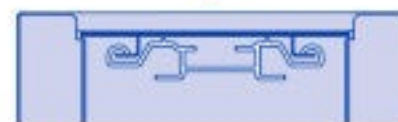

Bottom



STEP 4

Align new filter onto top and bottom rails, slide filter into cabinet.

Replace door and return thermostat to original settings.

